

7.2 AFTER-SALES SERVICE

The Manufacturer is always willing to answer Customer's questions and give information on use, maintenance or installation and so on. Please follow the instructions given under paragraph 1.2 on how to request our assistance.

8 SPARE PARTS


8.1 SPARE PARTS LIST

Exhauster use does involve some expendable parts. Following is the list of available spare parts and expendable parts.

Table 8.1- A

POS.	DESCRIPTION	PART NO.
1	Side-channel blower	Fox 16: K15-41-S Fox 22: K22-1-S
2	Solenoid valve	A: 9029 B: 9018
3	Pressure regulator	PCX-0001
4	Pressure gauge	35-56
5	Silencer	SIL-10
6	Differential pressure gauge	8153
7	Dedusting device	K2-0080
8	Filter cartridge	K2-91-Allum
9	Top seal	7860-0106
10	Bottom seal	7867-0106
11	Dust collection bag	99988
12	Vacuum breaker valve (only Fox 22)	V.L.P. 22



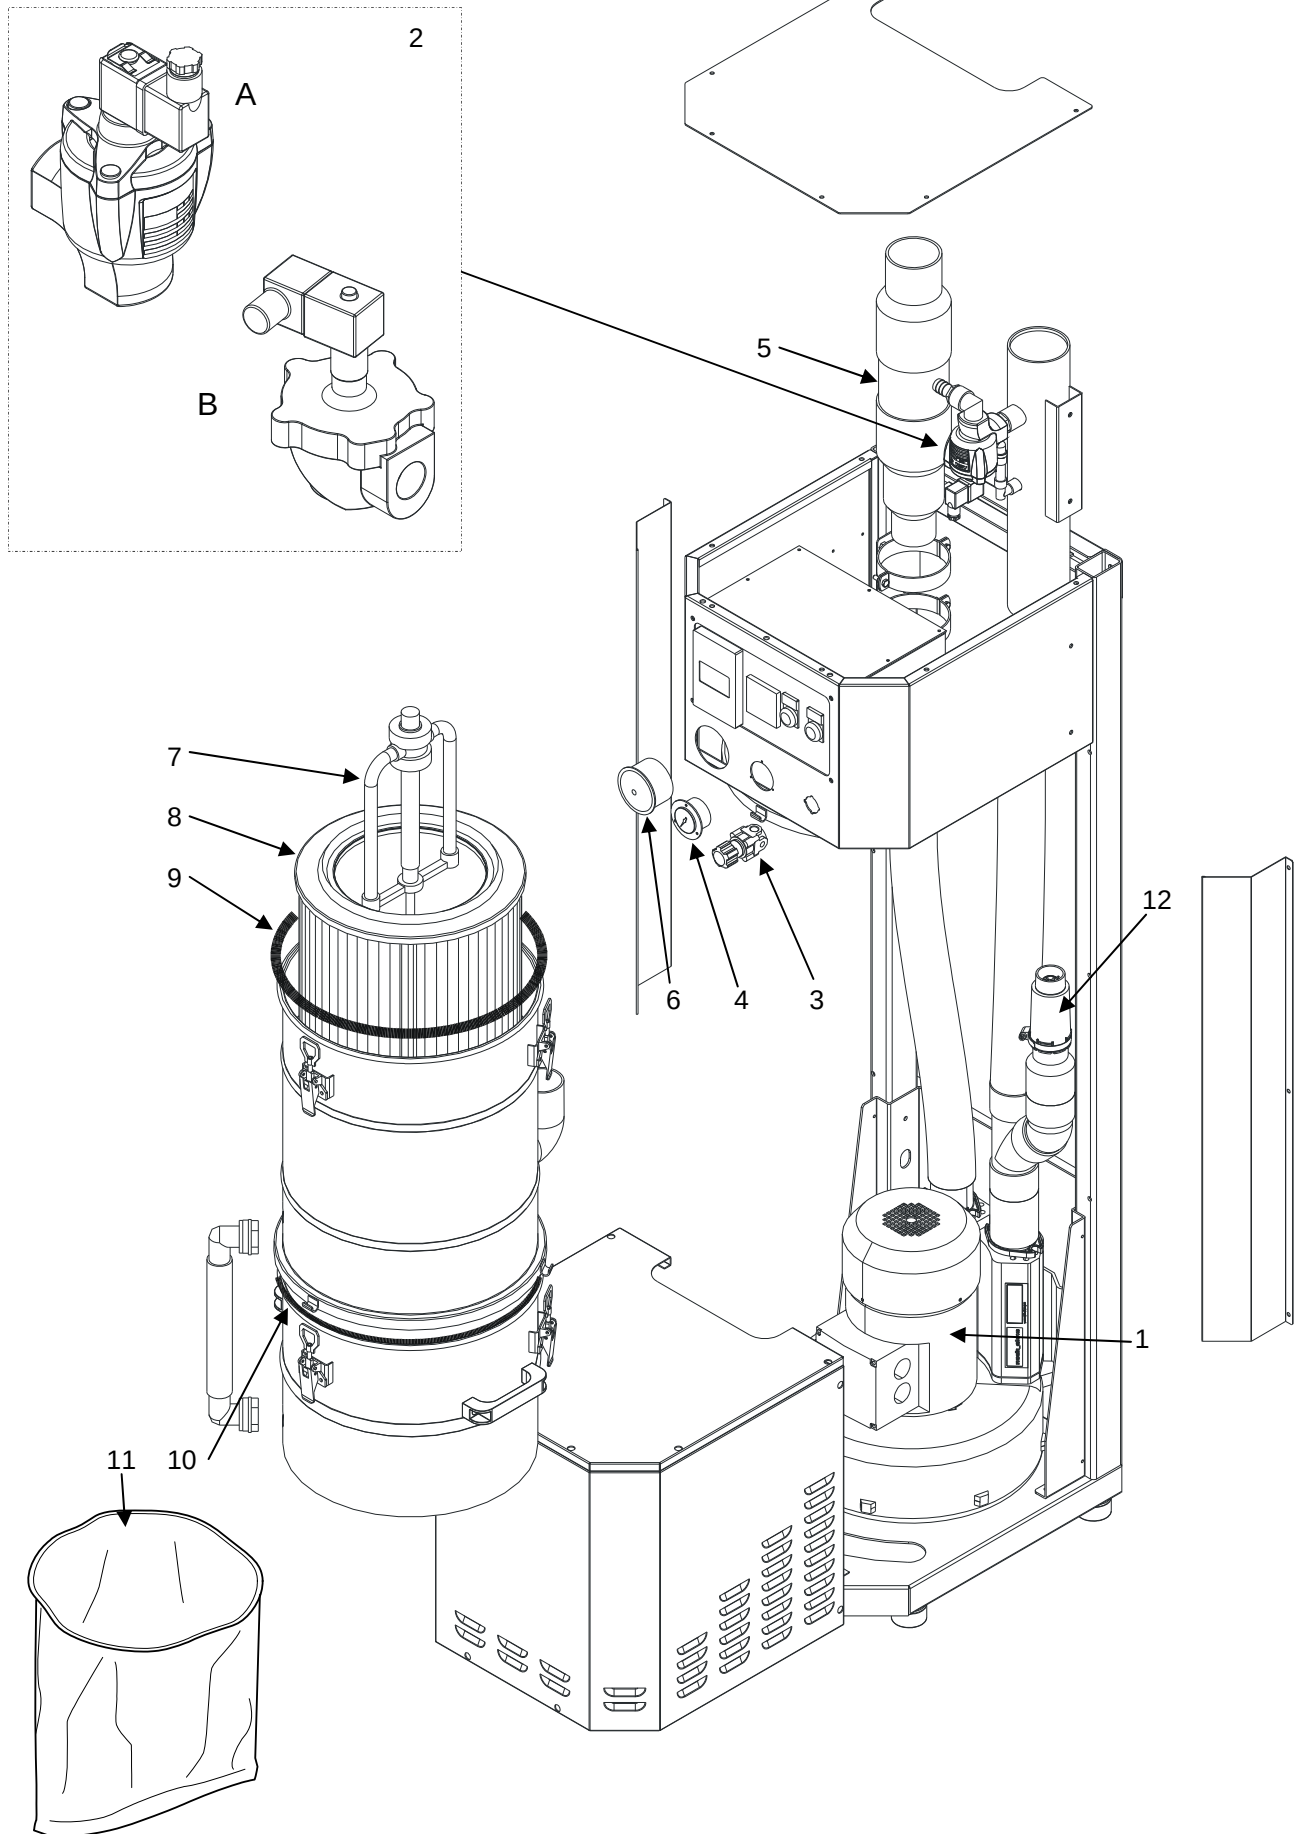

Please, see descriptions in Table 8.1 A - page 20