

7.2 AFTER-SALES SERVICE

The Manufacturer is always willing to answer Customer's questions and give information on use, maintenance or installation and so on. Please follow the instructions given under paragraph 1.2 on how to request our assistance.

8 SPARE PARTS


8.1 SPARE PARTS LIST

Exhauster use does involve some expendable parts. Following is the list of available spare parts and expendable parts.

Table 8.1- A

POS.	DESCRIPTION	PART NO.
1	Side-channel blower	K30-1-S
2	Solenoid valve	A: 9029 B: 9018
3	Pressure regulator	PCX-0001
4	Pressure gauge	K2-78
5	Silencer	SIL-3
6	Differential pressure gauge	8153
7	Dedusting device	SK-0080
8	Filter cartridge	FC405-ALLUM
9	Top seal	7860-0130
10	Bottom seal	7867-0130
11	Dust collection bag	99988
12	Vacuum breaker valve	V.L.P. 30



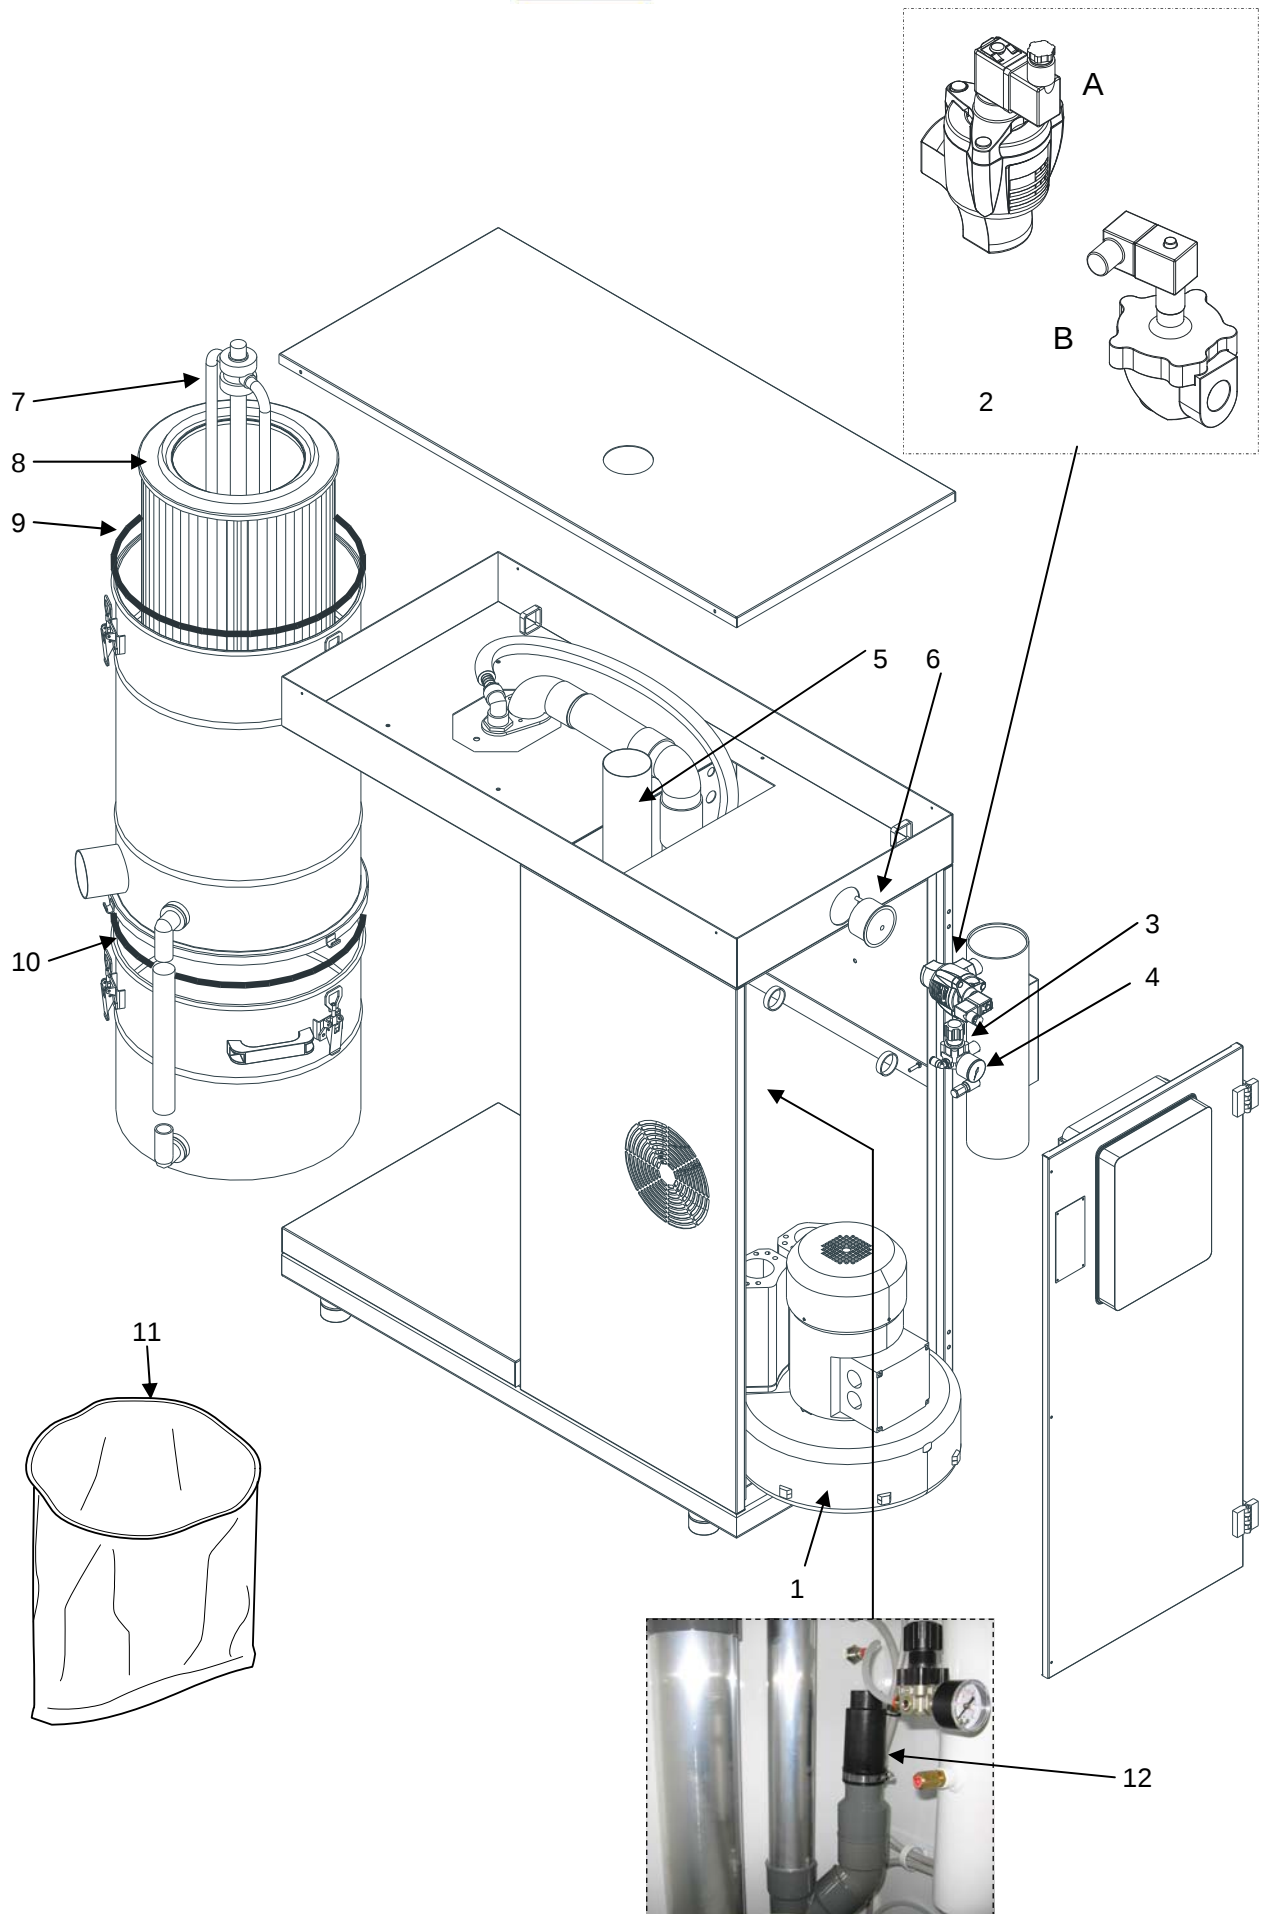

Please, see descriptions in Table 8.1 A - page 20