



7.2 AFTER-SALES SERVICE

The Manufacturer is always willing to answer Customer's questions and give information on use, maintenance or installation and so on. Please follow the instructions given under paragraph 1.2 on how to request our assistance.

8 SPARE PARTS


8.1 SPARE PARTS LIST

Service arm use does not involve any expendable parts. Following is the list of available spare parts.

Table 8.1- A

POS.	DESCRIPTION	PART NO.
1	Tubes and cables sheath	MP0418
2	Dust suction tube	8122
3	Compressed air tube	MP0321



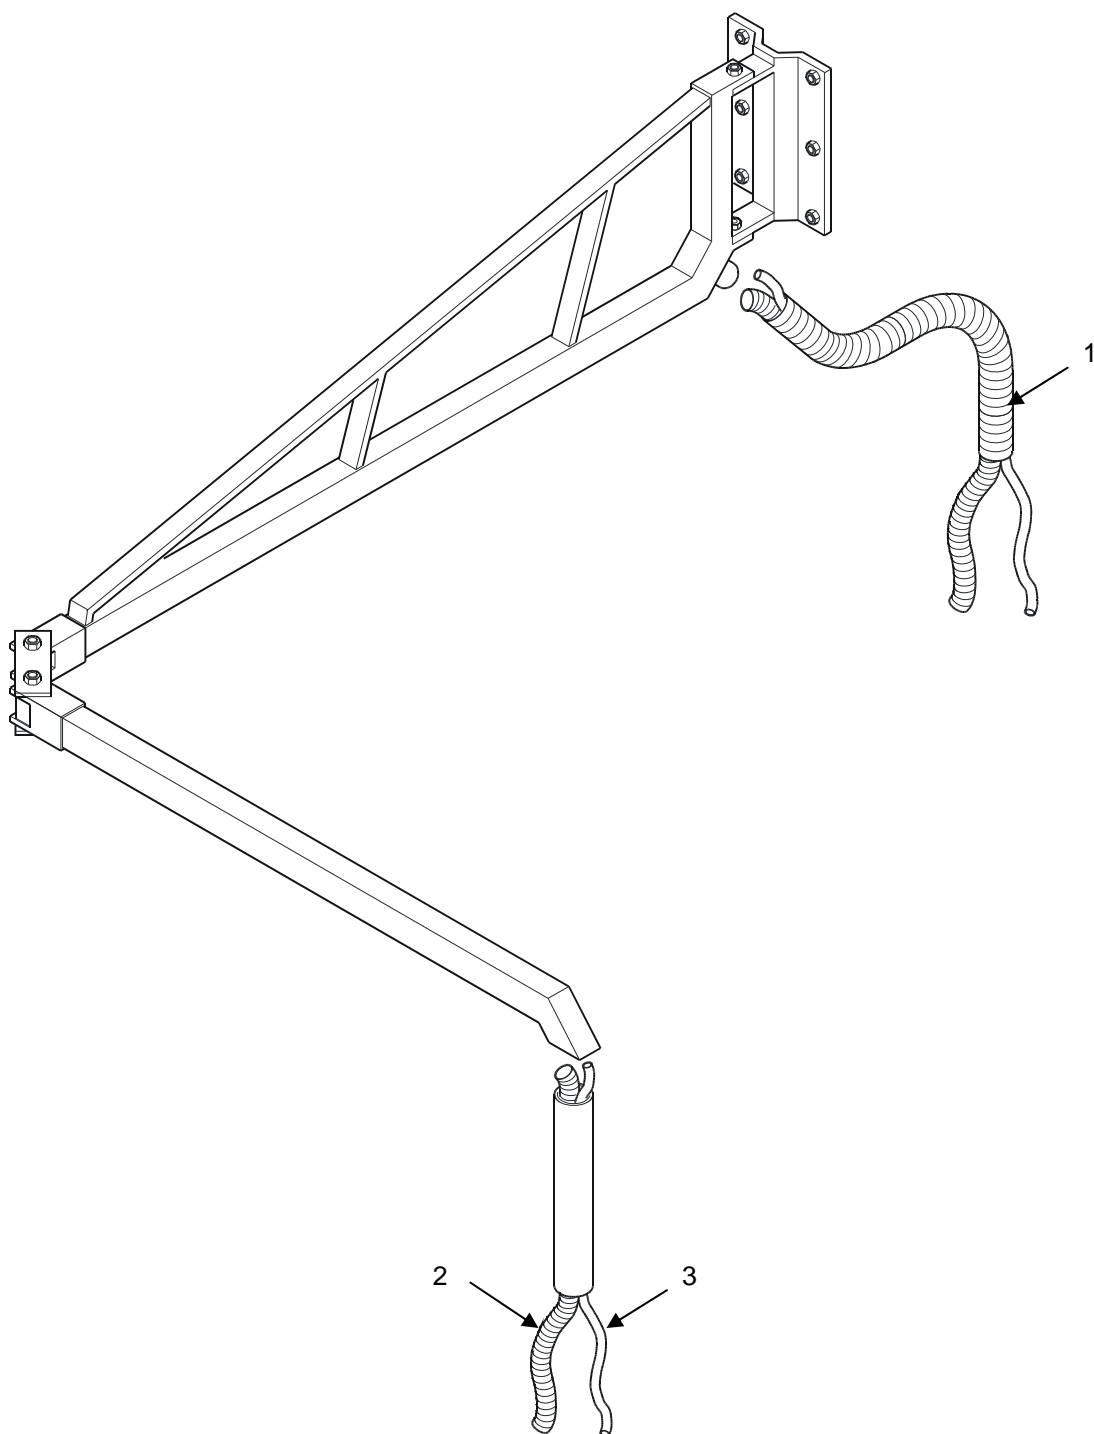

Please see descriptions in Table 8.1 A

35-35Bis-Jolly manual revision 01/10