


PARTS BREAKDOWN

Call 1.800.221.9705 for questions concerning performance of the product or other inquiries.

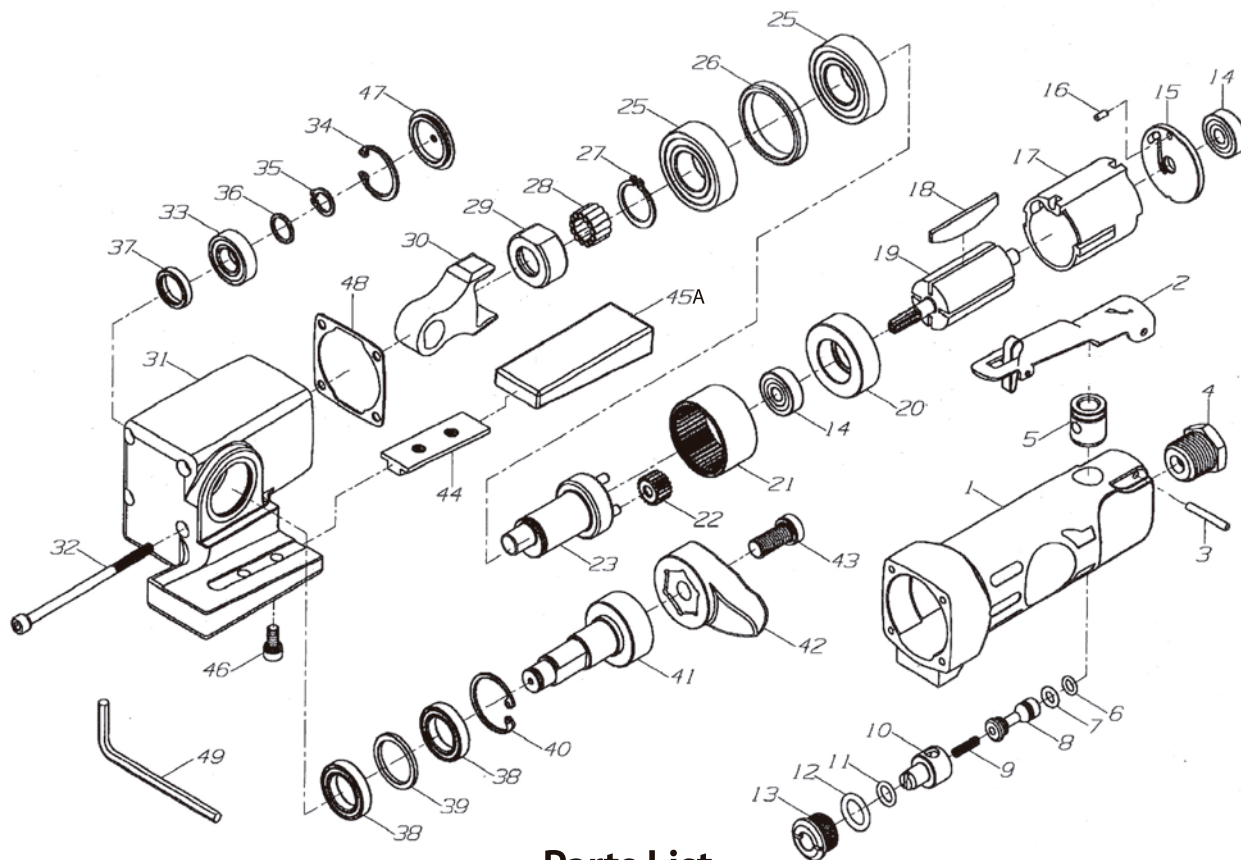

Parts List

INDEX NO.	PART NO.	DESCRIPTION	QTY.
1	DS1000-01	Motor Housing	1
2	DS1000-02	Lever	1
3	DS1000-03	Pin	1
4	DS1000-04	Inlet	1
5	DS1000-05	Valve Bushing	1
6	DS1000-06	O-Ring	1
7	DS1000-07	O-Ring	1
8	DS1000-08	Valve Stem	1
9	DS1000-09	Valve Spring	1
10	DS1000-10	Air Regulator	1
11	DS1000-11	O-Ring	1
12	DS1000-12	O-Ring	1
13	DS1000-13	Valve Plug	1
14	DS1000-14	Ball Bearing	2
15	DS1000-15	Rear End Plate	1
16	DS1000-16	Pin	1
17	DS1000-17	Cylinder	1
18	DS1000-18	Rotor Blade	4
19	DS1000-19	Rotor	1
20	DS1000-20	Front End Plate	1
21	DS1000-21	Internal Gear	1
22	DS1000-22	Planet Gear	3
23	DS1000-23	Planet Carrier	1
25	DS1000-25	Ball Bearing	2

INDEX NO.	PART NO.	DESCRIPTION	QTY.
26	DS1000-26	Spacer	1
27	DS1000-27	Retainer Ring	1
28	DS1000-28	Needle	13
29	DS1000-29	Needle Plate	1
30	DS1000-30	Drive Spindle	1
31	DS1000-31	Angle Head	1
32	DS1000-32	Screw	4
33	DS1000-33	Ball Bearing	1
34	DS1000-34	Retainer Ring	1
35	DS1000-35	Retainer Ring	1
36	DS1000-36	Spacer	1
37	DS1000-37	Spacer	1
38	DS1000-38	Ball Bearing	2
39	DS1000-39	Spacer	1
40	DS1000-40	Retainer Ring	1
41	DS1000-41	Spindle	1
42	DS1000-42	Press Blade	1
43	DS1000-43	Screw	1
44	DS1000-44	Steel Plate	1
45	DS1000-45A	Nylon Seat	1
46	DS1000-46	Screw	2
47	DS1000-47	Cover	1
48	DS1000-48	Gasket	1
49	DS1000-49	Hex Wrench	1